Thank you for purchasing SyncAV™ SSAV-EX1-5-6. For best results and your safety, please read the instructions and keep the manual for future reference.

■ Important!

- 1. Do not connect or disconnect any cables while powered
- Do not mix up the transmitter unit (TX) with the receiver unit (RX), and the IR blaster extension cable with the IR receiver extension cable
- Use supplied DC 5V/1A adapters only. Using wrong power adapter can be a safety hazard, may cause damage to the equipment and will void warranty

■ Introduction

SyncAVTM SSAV-EX1-5-6 HDMI extender transmits an uncompressed full HD 1080p@60Hz HDMI video over a single CAT5E/6 cable with zero latency and supports IR passback allowing user to control the source device with IR remote from the receiver site.

■ Features

- 1. Plug-and-play operation, no installation required.
- 2. Transmits uncompressed full HD signal with zero latency
- 3. Works with most HDMI devices
- 4. Supports IR passback
- 5. Works over CAT5e/6 cable

■ What's in the Box



1 x Transmitter unit (TX)



1 x Receiver unit (RX)



1 x IR blaster extension cable



IR receiver extension cable




2 x DC adapter




User manual

Panel Description


1. Transmitter unit (TX)

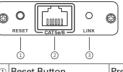


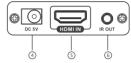

	(1) (2)	(3)	4 5 6
1)	Reset Button		Press to clear buffers and restart the unit
2	RJ45 port		Plug in your network cable here
3	LINK LED		blinks when no HDMI signal is detected
4	DC jack		Plug in the DC adapter
(5)	HDMI Input		Plug in your HDMI source here
6	IR Output		Connect with IR blaster extension cable

2. Receiver unit (RX)

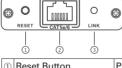


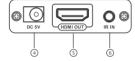

1	Reset Button	Press to clear buffers and restart the unit
2	RJ45 port	Plug in your network cable here
3	LINK LED	blinks when communication link is broken
4	DC jack	Plug in the DC adapter
(5)	HDMI Output	Plug in your HDMITV/monitor here
6	IR Input	Plug in the IR receiver extension cable

Setting up the system

Connect all the components as per picture below. Make sure all the cables are plugged in BEFORE powering up the system. Place the IR blaster as close as possible to the device you want to control with your remote. The system can be powered with a single DC adapter plugged into the transmitter, but using individual DC adapters for each unit is recommended for more reliable operation. Wait 'till the connection is established (LINK LED on the receiver unit turns solid).

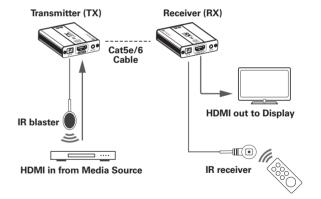

■ Troubleshooting:

No image

- Check and make sure all the cables are properly connected
- 2. Restart both TX and RX units by pressing and holding RESET button for few seconds
- 3. Check if the HDMI display device has been switched to the right input channel.
- 4. Use a shorter cable if possible

RX LINK LED keeps blinking

- 1. Make sure your network cable is terminated according to IEEE568B
- 2. Check whether the transmitter receives an HDMI signal from your source
- 3. Restart both TX and RX units by pressing and holding RESET button for few seconds and reconnect.

RX LINK LED lit solid but no image is produced

- Make sure your TV/monitor supports the source's HDMI resolution
- Check the HDMI connection between the RX unit and your TV/monitor
- 3. Make sure your network cable has copper wires

■ Specification

Power	Voltage/Current	DC5V/1A
Supply	Power consumption	TX: 2W RX: <2W
HDMI	HDMI compliance	HDMI1.3
performance and interface	HDCP compliance	HDCP1.4
una mieriaee	HDMI resolution	480P, 576P, 720p, 1080p, 640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x800@60Hz, 1280x1024@60Hz, 1440x900@60Hz, 1680x1050@60Hz
	Audio format supported	PCM
	Maximum transfer rate	I0.2Gbps
	Input and output TMDS level	0.5 – I.5Vp-p(TMDS)
	Input and output DDC level	5Vp-p(TTL)
	HDMI input cable length	<8m(AWG24)
	HDMI output cable length	<8m(AWG24)
Maximum	CAT5E	100m
transmission distance	CAT6	130m
Protection Level	Complete electrostatic protection	1a Contact discharge level 3 1b Air discharge level 3 IEC61000-4-2
Operating	Working temperature	0 ~ +60°C
Environment	Storage temperature	-10°C ~ +70°C
	Humidity (no condensation)	0 ~ 90%
	Dimensions (mm)	69.57(L) x 58.80(W) x 16.10(H)mm
	Colour	Black
	Weight	TX unit: 80g RX unit: 80g

Disclaimer

The products, brand names and standards may be registered trademark of their corresponding manufacturers/developers.

™ and ® may be omitted on the user manual.

Any pictures in the user manual are for reference only and may differ from the physical products.

We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, functionality or design.





SSAV-EX1-5-6 User Manual